

Operating instructions

Bus Extender

with 8A-power supply



Contents

| | |
|--|---|
| 1. Safety and operating instructions | 2 |
| 2. Device variants..... | 2 |
| 3. General | 2 |
| 4. Front view..... | 3 |
| 5. Functional description..... | 3 |
| 6. Head end bus structure | 3 |
| 7. Redundancy circuit | 4 |
| 8. Invalid mixed alignment | 4 |
| 9. Technical data | 5 |
| 10. Bibliography | 5 |
| 11. Document history | 6 |



BEB x00

Part N°: 904x.01

1. Safety and operating instructions



When assembling, starting-up and adjusting the modules, it is necessary to consider the system specific references in the manual instruction!



The modules may only be installed and started up by authorized technical personnel!



When assembling the modules into the receiving points, the adherence of the EMC regulations is to be secured!



The assembly and wiring have to be done without voltage!



All active modules may only be operated with the Headend Controller HCB x00 or Bus Extender BEB x00!



The main voltage and the operating voltage of the modules working by DC have to be in compliance to the operating parameters described in the technical data.



With all work the defaults of the DIN EN 50083 have to be considered! Especially the safetyrelevant execution of the DIN EN 60728-11 [1] is necessary!

2. Device variants

BEB 200 9047.01 Bus Extender with 8A-power supply (100 ... 240 V~ input)
BEB 300 9048.01 Bus Extender with 8A-power supply (48 V~ input)


3. General

The Bus Extender BEB x00 is a module of the head end system B-LINE but can also be used for the C-LINE/ C-LINE⁺ head end system. The B-LINE is a complete system for the middle sized distribution network, while the C-LINE/ C-LINE⁺ is for smaller distribution networks. All active modules are programmed at the central Headend Controller (HCB x00). The individual modules will be addressed at the address switch at the Bus Extender (line) and the respective modules (position).

The status of the individual modules will be displayed by colored LEDs:

- Red - ERROR Operating voltage failure
- Green - READY Operating status
- Yellow - ADDR. Remote control access or redundancy function

4. Front view

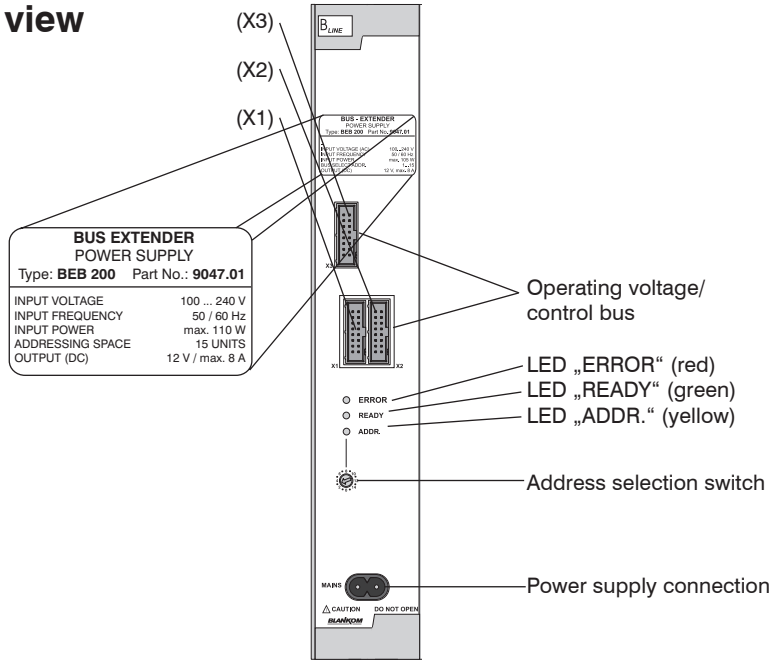


5. Functional description

The Bus Extender BEB x00 is the necessary extension module for the head end bus system. It is equipped with 3 bus connection sockets. The sockets X1 and X3 are equivalently occupied and are serving the vertical bus extension. The X2 socket of the BEB x00 is responsible for power supply of signal processing units (modules) within the respective line. It also defines the address of the line and canalizes the data transfer (see chapter 6). The total power consumption of the respective line (all connected modules within one line) may not exceed the current limit of the BEB x00. The ADDR. switch position "0" is switching the BEB x00 into redundancy operation status. Two BEB x00 will be switched parallelly. The left/ first (ADDR. = 1...15) canalizes the data transfer, the right/ second BEB x00 (ADDR. = 0) supplies current/ power. The left/ first BEB x00 overtakes the power supply of the respective line in case of a failure (see chapter 7)


One address is made up of two parts. The first address-part will be allocated with the address selection switch of the BEB x00 for the total line (01/ xx ... 15/ xx) and indicates the address of the respective line, the second part will be allocated with the address selection switch at the connected modules (xx/ 00 .. xx/ 15) and indicates the address of the respective module within the line. (see chapter 8)

6. Head end bus structure

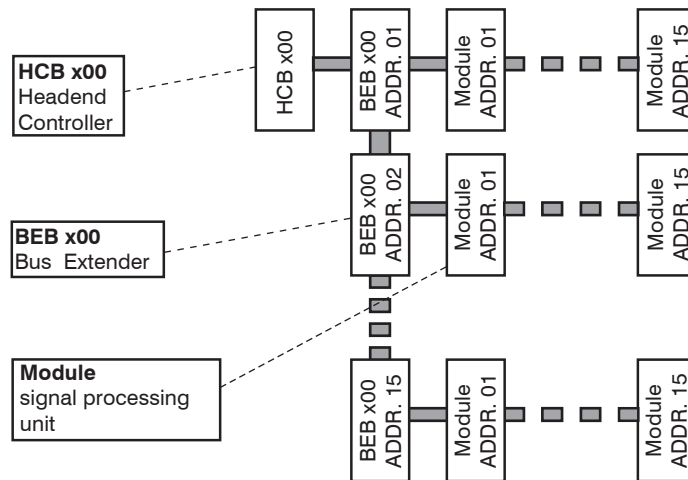

The number of the possible module connections (01 ... 15) to a BEB x00 depends on the total power consumption of this line!

7. Redundancy circuit
(Line redundancy)

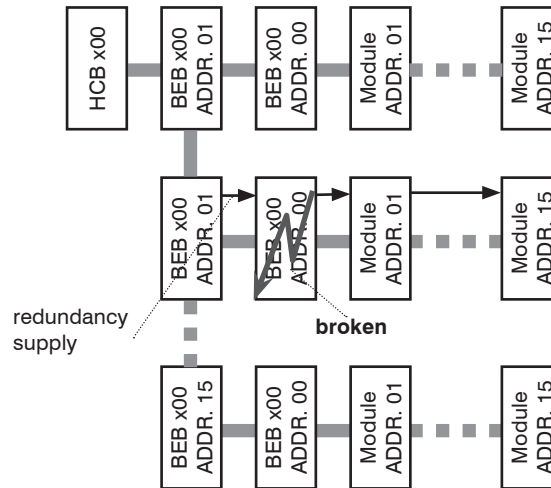


Description of the power supply redundancy (line redundancy)

- Adjustment of the address 00 at the right Bus Extender per line
- Adjustment of the address (1 ... 15) at the left Bus Extender per line

The left/ first BEB x00 will automatically take over the current supply of the line if the right Bus Extender is failing.

8. Invalid mixed alignments

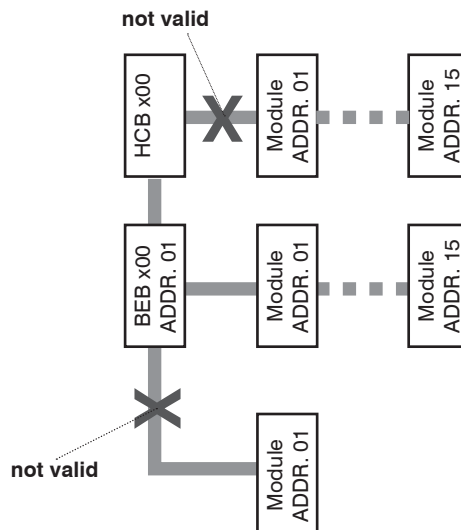

Mixed alignments on which the modules may be connected directly to the main-bus (HCB x00 at X1/ X2, BEB x00 at X1/ X3) and at the line-bus (BEB x00 at X2) are not valid.

9. Technical data

Address extent

| | |
|---|----------|
| Extended address range (Line address) | 1 ... 15 |
| Address for redundancy | 0 |
| Modules address range (Module address) | 0 ... 15 |

Power supply BEB 200

| | |
|-------------------|--|
| Main voltage | 100 ... 240 V, (+10%/- 5%) |
| Voltage frequency | 47 ... 63 Hz |
| Main connector | built in connector EN 60320-1/ C8 (IEC 320 C8) [3] |

| | |
|--------------------------|---|
| Power consumption | max. 110 W |
| Output voltage | 12 V |
| Ripple noise ratio | 66 dB |
| Current drain | max. 8 A** |
| Current limit | yes (9 A typical) |
| Short circuit protection | yes |
| Overvoltage protection | yes ($\leq 14,5$ V)* |
| Internal device fuse | G5 x 20, T4A (IEC 127-2/ V) |
| Protection class | II according DIN VDE 0860 [4] |
| Protection system | IP 20 |
| Radio noise suppression | according DIN VDE 0871 (curve B) [5] |

Power supply BEB 300

| | |
|-------------------------|---|
| Input voltage | 48 V DC (36 ... 72 V DC) |
| Input current (at 48 V) | 2.4 A |
| Power consumption | max. 125 W |
| Overcurrent protection | fold back (at 110 ... 143% I_{OUT}) |
| Overvoltage protection | 16.8 ... 20 V |
| Max. current drain | 8 A (-10 ... +43 °C)** 6 A (+55 °C) |
| Voltage stability | 1500 V DC (input/ output) |
| Radio noise suppression | EN 55022 (CIS PR22) Class B [6] EN 61000-4-2,3,4,6,8 [7] / ENV 50204 [8] |

Environmental conditions

| | |
|-------------------|--------------------------------|
| Temperature range | -10 ... +55 °C |
| Relative humidity | ≤ 80 % (not condensing) |
| Mounting method | vertical |
| Mounting location | splash-proof and drip-proof |

Physical information

| | | |
|------------------------|-----------------------|-------------------|
| Dimensions (l x w x h) | without 19" - adapter | 50 x 276 x 148 mm |
| | with 19" - adapter | 50 x 301 x 148 mm |
| Weight | BEB 200 | about 1,500 g |
| | BEB 300 | about 1,600 g |

Delivery contents

| |
|-------------------------------------|
| 1 x Power cord |
| 1 x Bus connector |
| 2 x Terminal resistance 75 Ω |
| 1 x Bus connector 400 mm |
| 2 x Multipole sockets |

* to reset device 2 minutes without voltage!

** > 6 A only use bus cable "8 A" !

10. Bibliography

- [1] EN 60728-11: Cable networks for television signals, sound signals and interactive services Part 11: Safety (IEC 60728-11:2005); German version EN 60728-11:2005
- [2] EN 50083-2 : Cabled distribution systems for television and sound signals. Electromagnetic compatibility for equipment; EN 50083-2:2001
- [3] EN 60320-1: Appliance couplers for household and similar general purposes Part 1: General requirements (IEC 60320-1:2001 + A1:2007); German version EN 60320-1:2001 + A1:2007
- [4] DIN VDE 0860: Audio, video and similar electronic apparatus, Safety requirements (IEC 60065:2001, modified + A1:2005, modified); German version EN 60065:2002 + A1:2006 + Cor.:2007 + A11:2008
- [5] DIN VDE 0871: Radio noise suppression of high frequency units, Determination of limits for industrial, scientific and medical equipment, identical with CISPR 23 :1987
- [6] EN 55022: Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement (IEC/CISPR 22:2005, modified + A1:2005); German version EN 55022:2006 + A1:2007
- [7] EN 61000-4-2: Electromagnetic compatibility (EMC) - Testing and measurement techniques-Electrostatic discharge immunity test, 2009-05-31
- EN 61000-4-3: Electromagnetic compatibility (EMC) - Part 4-3 : Testing and measurement techniques - Radiated, radio-frequency, electromagnetic field immunity test (IEC 61000-4-3:2006 + A1:2007); German version EN 61000-4-3:2006 + A1:2008
- EN 61000-4-4: Electromagnetic compatibility (EMC) - Part 4-4: Testing and measurement techniques - Electrical fast transient/burst immunity test (IEC 61000-4-4:2004); German version EN 61000-4-4:2004

EN 61000-4-6: Electromagnetic compatibility (EMC) - Part 4-6: Testing and measurement techniques - Immunity to conducted disturbances, induced by radio-frequency fields (IEC 61000-4-6:2003 + A1:2004 + A2:2006)

EN 61000-4-8: Electromagnetic compatibility (EMC) - Part 4-8: Testing and measurement techniques - Power frequency magnetic field immunity test (IEC 77A/694/FDIS:2009); German version FprEN 61000-4-8:2009

[8] ENV 50204: Radiated electromagnetic field from digital radio telephones - Immunity test, 1996-02-15

11. Document history

| Version | Date | Modification | Author |
|---------|------------|-------------------|-----------------|
| 1.00 | 15.04.2009 | basic document | Häußer, Rudolph |
| 1.01 | 11.08.2009 | revision | Häußer |
| 1.02 | 11.01.2010 | insert of BEB 300 | Häußer |

Options available upon request! Subjects to changes due to technical progress.

CE Declaration of Conformity

The Manufacturer

BLANKOM Antennentechnik GmbH · Hermann-Petersilge-Str. 1 · 07422 Bad Blankenburg · Germany

herewith declares the conformity of the products

| | | |
|------------------------|--------------|---------|
| Product name: | Bus Extender | |
| Type: | BEB 200 | BEB 300 |
| Product number: | 9047.01 | 9048.01 |

according to the following regulations

EN 50083-2
EN 60728-11 (as far as relevant)

and additional device-specific regulations, enclosed above, which these products are subjected to.

Date: 11.01.2010

Signature:



Piero Kirchner
(Managing Director)